


Installation Instructions for WPR138 Connecting Rods

This connecting rod is piston guided and does not contain thrust washers. In place of thrust washers are bearing spacer rings. These bearing spacer rings allow extra lubrication to the crank pin bearing. Please use the bearing spacer rings in place of thrust washers on the 1987 – 95 RM250's. Make sure the side clearance between the piston boss and the rod small end is between 0.011 and 0.016 inches.

WISECO

7201 Industrial Park Blvd. • Mentor, OH 44060-5396
440-951-6600 • Fax: 440-951-6606

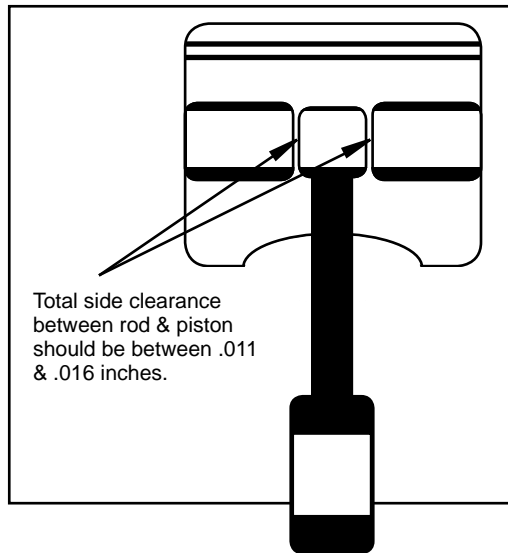

FC 7.5.1-65 Rev.A2